

In advance few details about the terminals and windows 7:

- \* The drivers are exclusive for 32bit systems at the moment
- \* You need administrator rights for use
- \* Please use the newest software you can find on <http://www.chipy.dk>

Hardware installation:

During the installation process the drivers will be installed on your hard drive. In some casual cases you must manual update the driver in device manager under the tab "Update Driver" and take the driver from the directory ../Program Files/Chipy Suite

Start the program (administrator):

All terminals can be used under windows 7. In some pc configurations you must start the program "Run As" administrator with a right click.

Start the program (compatibility):

Alternative you can permanent start the program as you adjust the compatibility modus for windows at the shortcut symbol.

Chipy windows 7 and windows xp mode:

Windows 7 has embedded a virtual pc with a 32bit xp system and service pack 3. This mode is embedded to use older hard- and software on this system. About the installation you can read more in the help from windows.